


# A simple filtration system for ultrasonic record cleaner with electric pump

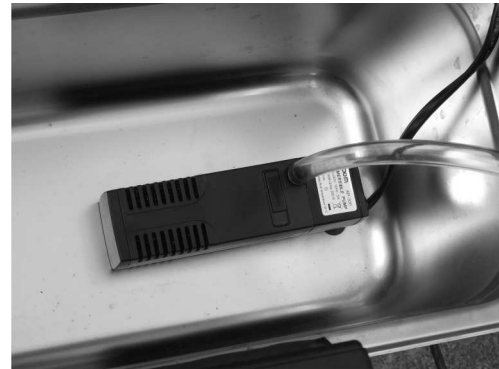

Easy to operate.

1. Place filter on the bottom of ultrasonic tank with cleaning fluid
2. Connect the plastic drain tube.
3. Place the other end of the tube in the plastic bottle.
4. Connect the power supply.

When the fluid level reveals the filter, tilt the cleaner so that it pumps out as much fluid as possible. Pour the rest of fluid out.

The mechanical filter is easy to clean. Just open the case, remove and rinse with warm water.

The housing is waterproof, but be careful. It is an electrical device.

Do not touch the filter under voltage.

Do not touch the cleaner or fluid when the pump is running.

After completing the filtering, turn off the power plug

The set consists of a complete device and a 1.5 m drain tube..

*Technical data*  
*AC 220-240V*  
*50 Hz*  
*Hmax 0,6 m*  
*Qmax 200 l/h*